


THIS DRAWING IS THE SOLE PROPERTY OF AK/HA INDUSTRIES, INC.



DWG/PART NUMBER:	DESCRIPTION: Hydro-Action Fiberglass Tanks - Anti Float Collar	PART WEIGHT:	REV: A.01	DATE: 7/2/2024
------------------	---	--------------	--------------	-------------------

Optional Anti Float Collar

Installed by HydroAction or HydroAction certified Assembler Only

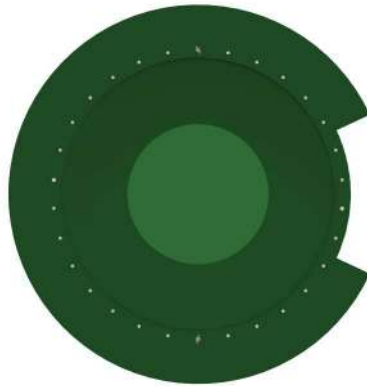

Gap left in anit float ring to allow for tank attachment

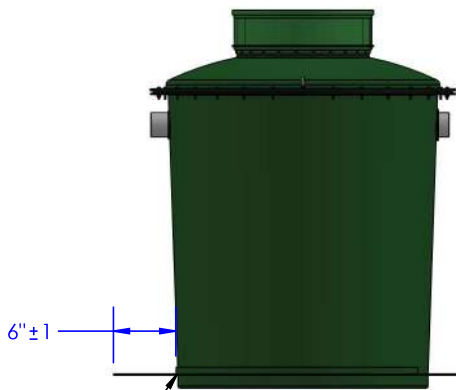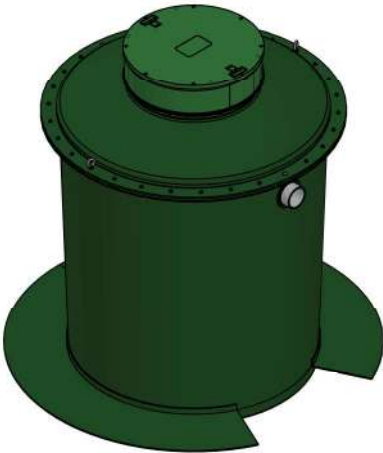

Collar attached concentric to tank body at the bottom third of the tank.

Fasteners must be spaced no more than 12 inches apart over the entire arc length of the anti float collar.

Anti Float Collar

Anti Float collar is attached to the tank body using the same tank attachment methods as the fiberglass connecting panels.

Method 1 - 2 Part Structural Adhesive with self tapping screws.

Method 2 - Stainless steel bolts with rubber bonded sealing washers.

Anti Float collar made from glass reinforced polyester



DRAWN BY: T.Genshock	MATERIAL: Glass Fiber-Reinforced Polyester	TOLERANCE: ±0.5 or 2.5° UNLESS SPECIFIED OTHERWISE	SIGNATURE:
-------------------------	---	---	------------